




1. On the Digital Display panel, there is a corresponding light for each filter i.e.,

- F1 = GC hepa prefilter
- F2 = Granules Cartridges
- F3 = Cartridge Sleeves

Over time, as the unit is used, each light separately will be coloured:

- green when new;
- go to orange at 20% remaining;
- go to red at 5% remaining and then
- red flashing when finished

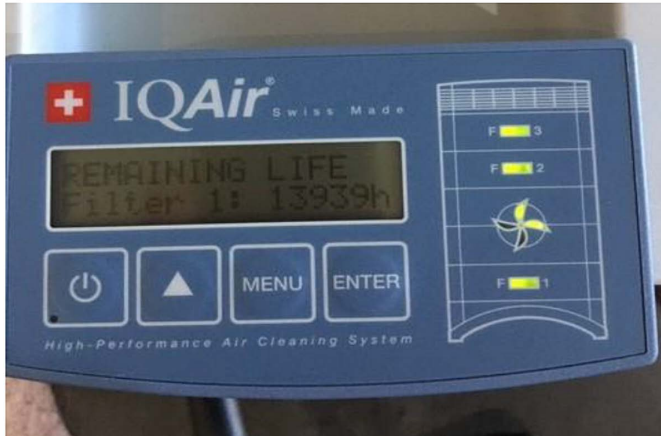

2. Additionally or alternatively, you can dial up the remaining hours left on each filter:

- press MENU once to get hours remaining on PreFilter
- now press Δ to get hours remaining on Cartridges
- now press Δ again to get hours for Cartridge Sleeves

#### Instructions for removing filters:

1. Loosen both top handles from lid
2. Prise both arms outwards from unit to full extent so they stay in place
3. Remove lid
4. Remove all 4 cartridges (1/2 turn anti-clockwise, pull out) and put aside
5. Now prise out bottom filter cannister – holding the prefilter – upturn cannister to dislodge old filter
6. Insert new Pre filter and replace cannister into machine
7. Now pull 4 white sleeves over each of the 4 new gas cartridges
8. Insert each sleeved cartridge and screw in ½ turn clockwise
9. Test each cartridge by pulling upwards – check firmly in place
10. Replace top lid
11. Close arms into unit – now make sure all cannisters are perfectly aligned
12. Tap handles home simultaneously to complete closure

#### RESETTING HOURS FOR NEW FILTERS (consult Owners Manual)

1. To reach the Filter Life Reset function from the main display window, press the Menu key seven times
2. Press and hold the Enter key until the flashing cursor appears.
3. Press the key to select the filter that has been replaced.
4. Press the Enter key to confirm that the selected filter has been replaced. To safeguard against inadvertently resetting the life of the wrong filter, the selection needs to be reconfirmed. The Filter Life LED for the appropriate filter is now flashing red.  
Note: If the wrong filter has been selected, or if you wish to exit the enter mode, press the Menu key. This leaves the Filter Life Reset unaffected.
5. To confirm the filter change and exit the Filter Life Reset display window, press the Enter key.
6. Upon successful reset of the filter life, the new remaining filter life (taking the currently selected fan speed and programmed filter load indices into account) will be displayed.